



eTrex Touch Geocaching

Your eTrex Touch is Pre-loaded with 250k Geocaches
You can also download your own as per the below

Download Geocaches to your Garmin GPS

One of the most popular websites to use for Geocaching is
<http://www.geocaching.com/>

You need to first register on this site as a Basic Member.

1. To be able to send Geocaches directly from the geocaching.com website you need to first install on to your computer a piece of software called Garmin Communicator Plugin.

First connect your GPS device to your computer

Use Internet Explorer, Firefox or Safari (Google Chrome is not supported)

Download this software from the following links below: -

Windows Version -

http://www8.garmin.com/support/download_details.jsp?id=3607

Mac Version -

http://www8.garmin.com/support/download_details.jsp?id=3739

2. Go to the [geocaching.com](http://www.geocaching.com) website and login with your registered details.
3. On the homepage you can search for Geocaches in your location or elsewhere.
4. A list of Geocaches in order of distance from the location that you have searched for will be displayed.
5. You can click on each Geocache to display more information about it.
6. Within the Geocache information page you will see a box 'Send to My GPS' click on this to send the Geocache to your device.
7. A send to GPS box will appear, if your device is not shown click on the find device box and also make sure that you have not got a pop up blocker, blocking the process.
8. Once your device is displayed, click on the 'Write box' and the Geocache will be sent to your device.

Finding and Navigating to your Geocaches in your GPS Device

1. Turn on your eTrex Touch - Swipe the screen to the left / right, or tap on the < > symbols at the edge of the screen until you get to the Geocaching Activity Profile screen. **FIG (1)**
2. Touch on the screen and you will be taken to the Map Page which will display the closest Geocache to you along with distance away and directional arrow to follow. **FIG (2)**



FIG (1)

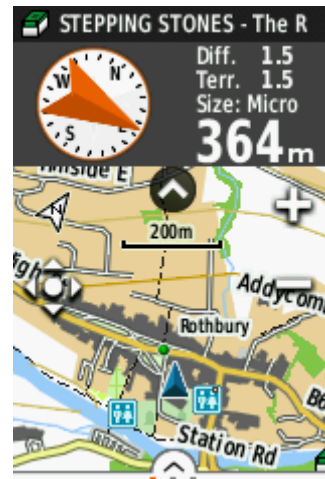


FIG (2)

3. Touch on the Geocache box at the top of your map page and you will be taken to the Geocache list page – Touch on the Treasure chest Icon in the centre – a list of the Geocaches loaded on your device will be displayed in order of distance away from you. **FIG (3)**
4. Touch on the Geocache that you want to find – The map page will display with the location of the Geocache show as a drawing pin – Touch on Go to start navigation **FIG (4)**

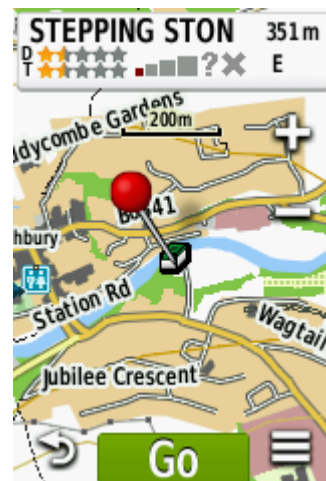
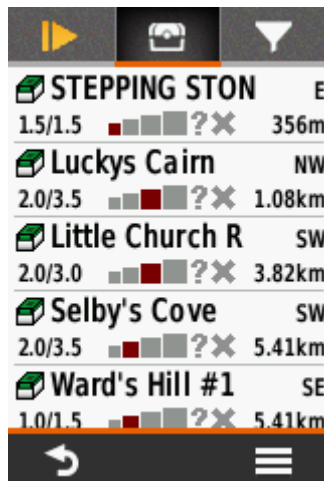


FIG (3)

FIG (4)

- The Map page will now be displayed showing a pink line to help you navigate to the Geocache as well as a directional arrow with approximate distance at the top.

FIG (5)

At the top of your map page you can press the V shaped arrow underneath the Compass pointer to then deselect or re-select the Geocache directional compass.

- Touching on the Geocache compass box at the top of the map page will bring up a screen that lets you view more information about the Geocache, Hints etc. **FIG (6)**

Touch on the Tick at the bottom of the screen and you can log that you have found the Geocache etc. **(FIG (7))**

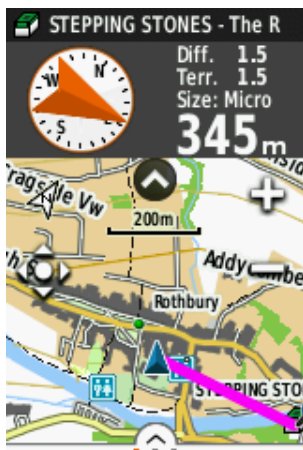


FIG (5)

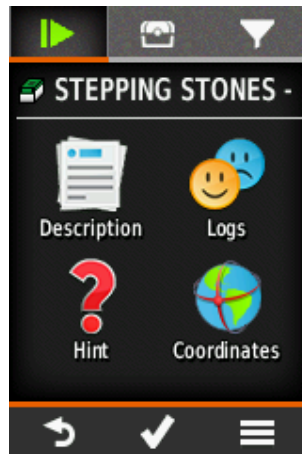


FIG (6)

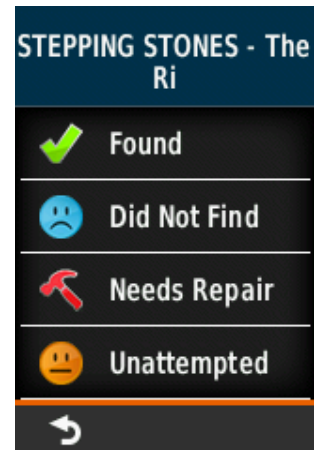



FIG (7)

7. To stop navigation at any time press on the  symbol at the bottom of the Map Page – press on the  icon – you will now be taken back to the Geocache Activity page – Press on the  icon - Select Stop Navigation or Find Another

