

Recommended Setting for Garmin Monterra

Home Screen



①	Swipe down to view notifications.
②	Enter text to start a search.
③	Swipe left and right to switch pages. Hold to customize shortcuts, widgets, or wallpaper.
④	Hold to drag shortcuts in or out of the dock.
⑤	Touch to view all installed apps.



There are three keys found in the main housing of the device that you will find useful

From left to Right they are ↶ Back – 🏠 Home Page – ≡ Sub-Menu

To pretty well edit settings on any page Select ≡ Sub-Menu option To step back one page use the ↶ return option

Garmin Settings		Recommended - Those highlighted in yellow are essential settings the rest are personal
Garmin Settings	Garmin Settings	From Home Page Select Sub Menu > System Settings
Map	Orientation	Our recommendation for following a route is to have Track up—but North up is useful especially when navigating using the 'tap & go' method. Use Automotive mode if using in car
	Guidance Text	When Navigating
	Dashboard	Compass
	Layers	Select the layers you wish to view – recommend default settings
	Auto Zoom	Auto Zoom – On Portrait or Landscape Buttons
	Zoom Buttons	Show
	Detail	Normal
	Vehicle	Default
	Map Information	Lists maps in the device > select any map to Enable/Disable - To View some maps saved to internal memory you may have to disable maps held on SD card
Tracks	Recording	On
	Show on Map	On
	Colour	Red – shows well on most maps but a personal setting
	Record Method	Auto
	Interval	Normal
	Auto Archive	When Full
	Auto Start	On
	Auto Pause	Off – personal pauses tracking automatically when you stop moving
Routing	Navigation Voice	British English-Serena – voice prompts in UK female English voice – setting can be changed to your personal preference from a list of world languages
	Activity	Direct Routing for Off Road or Walking Automobile Driving for turn by turn routing
	Lock on Road	No
	Route Transitions	Auto
More	Ant Sensors	Off until required
	Units	Personal – Recommend Metric for Distance & Speed, Elevation, Depth, and Vertical Speed – Celsius for Temperature and Millibars for Pressure.
	Position Format	British Grid with OS maps – Lat/Long Decimal Format - hddd mm.mm for Geocaching
	Heading	Display – Numeric Degrees North Reference – Magnetic GoTo Line – personal to choose compass arrow but choose one of the bearing options Large or Small Compass Mode – On Calibrate Compass – Press & follow instructions

	Altimeter	Auto Calibration – On Barometer Mode select Variable or Fixed Elevation (usually Variable) Pressure Trending – personal choose from Save when device on or always Plot Type - Personal – select from 4 types Calibrate Altimeter – Press & follow instructions – You need to know the correct elevation or pressure
	Proximity Alarms	Radius Units – personal but recommend metres with maps calibrated in metric Enable Alarms Vibrate – Off only select if required Proximity Tones – select Approaching, Leaving, Proximity and Upcoming Speed ringtones
Wireless and Networks Settings	WiFi	On when required
	Bluetooth	On when required
	Airplane Mode	Select when required
	VPN	You must set a lock screen PIN or password before you can use credential storage
	NFC	On – Allows data exchange when the device touches another device
	Android Beam	On – Ready to transmit app content via NFC
Device Settings	Profiles	Display Profile – On Profile in Mount – No Change Available Profiles – select your profile recommend Recreational for general walking and navigation
	Sound	Volumes – use sliders to change sound options Silent Mode – default Mute choose from Off, Vibrate or Mute Ringtones & Notifications – choose ringtones or Vibrate and ring System – default High Powered Audio Off – Touch Sounds, Screen Lock sounds & Vibrate on Touch On
	Display	Colour Mode – Auto Glove Mode – Off if on increases touchscreen sensitivity for gloves but may lead to false touches Brightness – use slider to select preferred brightness Wallpaper – choose wallpaper from Gallery, Live Wallpaper, Photo's and Wallpaper. Screen Orientation – recommend Portrait choose from Auto-rotate, Portrait & Pandscape Backlight Timeout – 30 seconds unless training when we use Always On Sleep 1 minute – saves battery power by turning off screen when backlight times out Font Size - Normal
	Storage	Displays Internal Storage levels
	Battery	Displays Battery & Charging Levels
	Apps	Manage installed Apps
Personal	Accounts & sync	Personal – displays your Gmail account
	Location Services	GPS Satellites – On lets apps use GPS to pinpoint your location GLONASS – On WAAS/EGNOS – On Goole Location Services – On Location determined by WiFi Location & Google Search – Off unless you want to let Google use your search results
	Security	Personal settings – recommend you leave on default settings
	Language & input	Personal settings - recommend you leave on default settings

	Backup & Reset	Back up my data – default Off – On to choose to back up application data, WiFi passwords and other settings to Google servers Automatic Restore – On Factory Data – erases all data on device – do not use except in extremis	
System	Date & Time	Automatic Date & Time	
		Automatic Time Zone	
		Use 24 hour clock	
		On Select date format – recommended default	
	Accessibility	Select service options	
	Developer Options	Leave well alone	
About Monterra	Displays current GPS firmware, Software, Android, Kernel versions and Build number		
System Updates	You should be connected to the Internet > Select to check if there are any system updates > if there are select Download to complete updates		
Garmin Navigation Sub-Menus	Compass	Sight'N Go – set a point ahead to navigate to Change Dashboard – personal choice Calibrate Compass – Press & follow instructions Settings – takes you back to Heading menu Lock Data Fields – leave on default unless you wish to lock Restore Defaults – restores the settings to factory settings	
		Route Planner	Options when you have routes
		Track Manager	Settings takes you back to setup menu
		Trip Computer	Reset – allows you to reset trip data Setup Trip Computer – alter the look of your Trip Computer Change Dashboard – change the trip dashboard Lock Data Fields - leave on default unless you wish to lock Restore Defaults - - restores the settings to factory settings
			Waypoint Manager
		Where To	Navigate to – choose your navigation options