


Some words of caution around SD cards

We had a few tales of woe recently where users have either lost cards whilst changing batteries or deleted the contents of their expensive SD cards in error.

Make sure you don't lose your SD card whilst changing batteries on the go as we've had a couple of occasions recently where users have dropped expensive Micro SD cards whilst changing batteries on the hill.

If the card is lost then I'm afraid you're not going to get a free replacement from Garmin as loss & theft are not covered.

We recommend that if you do have to change batteries on the hill then be very careful and make the change with the screen facing to the ground that way you stand less chance of dropping the SD card whilst you fiddle with the batteries.

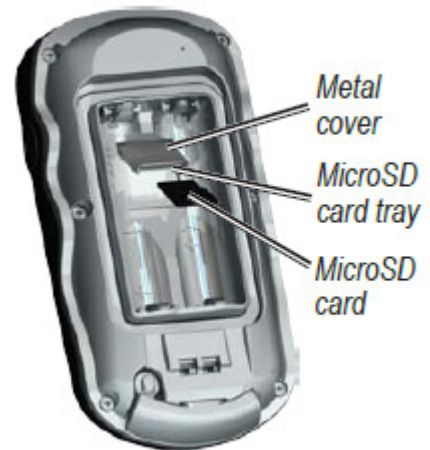

GPST Tip – did you know you can back up the contents of your Micro SD > with your SD card installed in your device > on your computer go to My Computer > select Removable Disk (G) this is your SD Card > open Garmin Folder > copy the 3 map files GMAPSUPP.GMA, GMAPSUPP, GMAPSUPP.UNL, to a folder on your computer for safe keeping – **warning be careful not to select Delete as it cannot be undone**